

Trouble Shooting Guide:

Symptom	Check/ Remedy
Unit will not turn ON	<ul style="list-style-type: none">• Is the unit plugged into a "working" 120 Volt, AC, earth grounded outlet?• Is the unit's top cover in place, and snapped shut?• Is the Main Filter locked in place, with the Main Filter locking handles facing toward the center of the unit?
Unit will still not turn ON	<ul style="list-style-type: none">• Call HealthAir™ Customer Service.
Unit is ON, but no speed change	<ul style="list-style-type: none">• Call HealthAir™ Customer Service.
Unit runs, but power light is OFF	<ul style="list-style-type: none">• Call HealthAir™ Customer Service.
Main Filter light is out	<ul style="list-style-type: none">• Replace Main Filter.• Main Filter has reached its contaminant holding capacity.
Bio Monitor light is out	<ul style="list-style-type: none">• Call HealthAir™ Customer Service.

Health**AIR**[™] PURIFIER

Sun Water Systems, Inc.
6310 Midway Rd
Haltom City, Texas 76117
877- FDA-PURE

Health**AIR**[™] PURIFIER

Owners Manual

For 500 Series EMF Air Cleaners
Advanced Air Purification Systems



EMF Filtration System™
Portable Room Air Cleaner

healthy air |
for all your indoor spaces™

Where to Place the Air Purifier:

The 500 Series EMF Air Cleaner is designed as a portable floor model. Place the air purifier anywhere in the room; being careful not to block air from “entering” the intake grill, or “exiting” the top grill cover. Do not place the air purifier where drapes or other objects block airflow. For best performance, it is recommended to place the air purifier at least two (2) feet from walls and other obstructions.

Air Cleaner Operation:

After removing the protective plastic from the unit – plug the unit into a standard 120 volt earth grounded AC circuit and turn the On/Off button on the control panel. The control panel lights should be illuminated as follows:

On/Off - green light is ON

Main Filter - green light is ON

Bio Monitor - green light is ON

The HealthAir™ indicator light system is an all “green” system.

When the unit is operating properly, both indicator lights will be “green”.

Main Filter Light:

When the Main Filter is operating at full efficiency, the green light is always ON. When the light goes OFF, this is your indication to “replace” the Main Filter. The average life expectancy of the Main Filter is 12 to 16 months. See Main Filter replacement instructions.

Bio Monitor Light:

Green light ON indicates that airborne microorganisms are continuously being destroyed in the EMF Filtration System. If the light goes OFF, microorganism destruction has been interrupted. Immediately turn off the unit and unplug it from the outlet. Call HealthAir™ customer service at 877-FDA-PURE for servicing instructions.

Cleaning the Unit:

Before cleaning the unit, shut the air purifier OFF and unplug it from the outlet. Clean exterior surfaces only with a soft cloth dampened with water. Do not use abrasive cleansers. Do not spray the unit with any liquid cleaner. Wipe the intake grill weekly with a clean, dry non-static cloth.

Filter Replacement:

Post Filter – At least every 3 months, replace the post filter. This insures continued control of household odors.

Ordering Replacement Filters:

Enclosed is a convenient form for ordering the replacement filters directly from HealthAir™. Simply fill out the order form and fax, mail or call in your order. For any questions, please call our Customer Service Department at 877-FDA-PURE

Post Filter Installation Instructions:



1. Turn the air purifier off and unplug from power outlet.
2. To access post filter, release latch, open and raise lid. (Fig. A) Separate lid from the air purifier. Turn over to reveal inside of lid.



3. Remove the post filter by pulling it from the inside rim of the lid and discard. (Fig. B)


4. Carefully place new post filter in the lid. Press filter under the five tabs in the rim of the lid to secure in place.
5. Replace the lid by matching the front tab to the catch below the control panel buttons, and press down gently until rear latch engages. Plug air purifier into power outlet and turn on.

EMF Main Filter Installation Instructions:


When the green Main Filter indicator light goes OFF, it is time to replace the EMF Main Filter. The average life expectancy of the EMF Main Filter is 12 to 16 months.




1. Turn the air purifier off and unplug from power outlet.
2. To access post filter, release latch, open and raise lid. (Fig. A) Separate lid from the air purifier and set aside.

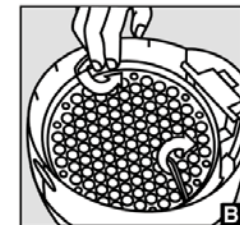

3. To release EMF Main Filter, move both gray handles toward front of air purifier. (Fig. B)

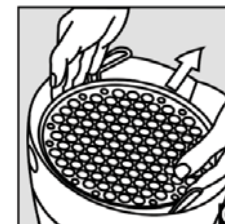

4. To remove EMF Main Filter, lift filter from the internal chamber. (Fig. C) Before installing the new EMF Main Filter, make sure the filter seal “O” ring is seated properly in the “O” ring channel.

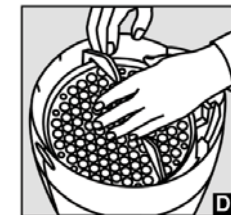

5. To load EMF Main Filter, align hole in filter tab with brass pin. Press filter down. To lock filter in place, move both gray handles in toward the center of the filter as shown. (Fig. D)
6. Replace lid and latch. Plug air purifier into power outlet and turn on. Note: The proper filter must be used and loaded correctly or air purifier will not turn on. For additional instructions call Customer Service at: 877-FDA-PURE

The HealthAir™ EMF Air Cleaner is designed for “plug and play” operation and comes complete, ready for use. Simply follow the instructions for set up contained in this owner’s manual.

To receive maximum benefit from the HealthAir™ EMF Air Cleaner, we recommend replacing the EMF main filter every 12, and the charcoal post filter every 3 months. Order online at aquasana.com or call 877-FDA-PURE.

Important Safety Precautions

Please read all instructions before operating your air purifier. Basic precautions should always be observed when using electric appliances to reduce the risk of fire, shock and injury.

Observe the following general precautions to insure effective, safe and trouble-free operation of your HealthAir™ EMF Air Cleaner.

Warning: This air purifier must be plugged into a 120 Volt, AC earth grounded outlet. Do not use this air purifier with a wall outlet adapter. **Do not operate this air purifier with an extension cord.**

1. **Plug the unit DIRECTLY** into an earth grounded standard 120 volt, AC electrical outlet. Insert the plug into the outlet fully. The plug is a polarized line plug (one blade is wider than the other) and can only be inserted one way as a safety feature.
2. **Place the unit on a flat and level surface** to allow continuous airflow to the bottom intake and out the top outlet grill.
3. **Always unplug the air purifier** before moving it, opening the top lid, changing the post filter, main filter or before cleaning. (Clean only with a dry, non-static cloth.)
4. **Do not place any foreign objects inside the unit** because electric shock and injury could result.
5. **Do not use the unit if any part is missing** or damaged in any way.
6. **Do not run power cord under carpeting or near heaters, registers, radiators, stoves or fireplaces.** To avoid a tripping hazard, keep the power cord away from traffic areas.
7. **Never operate the air purifier in areas where combustible gases or vapors are present** or any other flammable materials.
8. **Never immerse the unit in water or other liquids,** spray the air purifier with liquids or clean the air purifier under running water.

WARNING: To prevent fire or shock hazard, do not expose this unit to rain or moisture.

Important Safety Precautions (continued)

9. **The air purifier is designed for indoors,** do not use this air purifier outdoors.
10. **Do not operate this unit with a damaged cord or plug,** or after the unit malfunctions or has been damaged in any manner. Call HealthAir™ Service at 877-FDA-PURE for servicing instructions.
11. **This unit is designed for residential use only. Do not use in industrial or severe commercial applications.**
12. **A short power supply cord is provided** to reduce the risk resulting from becoming entangled in or tripping

