

Post Filter Installation Instructions:



1. Turn the air purifier off and unplug from power outlet.
2. To access post filter, release latch, open and raise lid. (Fig. A) Separate lid from the air purifier. Turn over to reveal inside of lid.

3. Remove the post filter by pulling it from the inside rim of the lid and discard. (Fig. B)


4. Carefully place new post filter in the lid. Press filter under the five tabs in the rim of the lid to secure in place.
5. Replace the lid by matching the front tab to the catch below the control panel buttons, and press down gently until rear latch engages. Plug air purifier into power outlet and turn on.

EMF Main Filter Installation Instructions:


When the green Main Filter indicator light goes OFF, it is time to replace the EMF Main Filter. The average life expectancy of the EMF Main Filter is 12 months.




1. Turn the air purifier off and unplug from power outlet.
2. To access post filter, release latch, open and raise lid. (Fig. A) Separate lid from the air purifier and set aside.

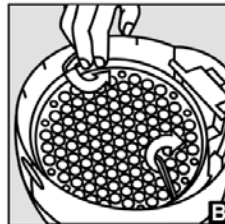

3. To release EMF Main Filter, move both gray handles toward front of air purifier. (Fig. B)

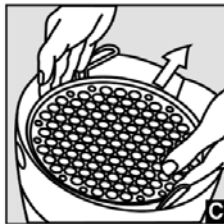

4. To remove EMF Main Filter, lift filter from the internal chamber. (Fig. C) Before installing the new EMF Main Filter, make sure the filter seal "O" ring is seated properly in the "O" ring channel.

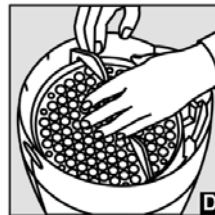

5. To load EMF Main Filter, align hole in filter tab with brass pin. Press filter down. To lock filter in place, move both gray handles in toward the center of the filter as shown. (Fig. D)
6. Replace lid and latch. Plug air purifier into power outlet and turn on. Note: The proper filter must be used and loaded correctly or air purifier will not turn on. For additional instructions call Customer Service at: 877-FDA-PURE